



Make A Mini Breadboard

Written By: Katzman



TOOLS:

- [2mm drill bit \(1\)](#)
- [Drill, or drill press \(1\)](#)
- [Permanent marker \(1\)](#)
- [Sandpaper \(1\)](#)
- [Scissors \(1\)](#)



PARTS:


- [Plastic Card \(1\)](#)
- [Components to use \(1\)](#)

Step 1 — Make A Mini Breadboard




- Retrieve an old or used plastic card.

Step 2

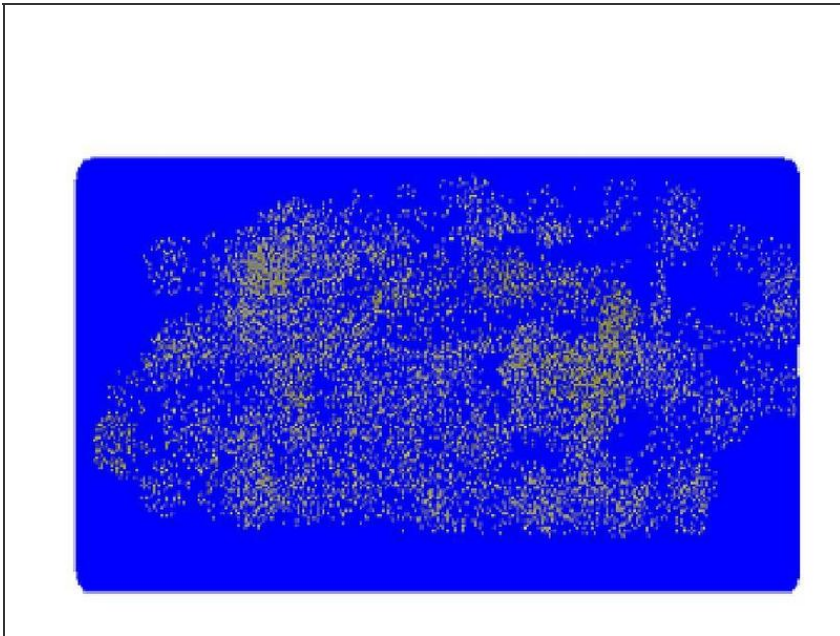


- Use the sandpaper to deface/clean the card.
- This step is optional.

Step 3

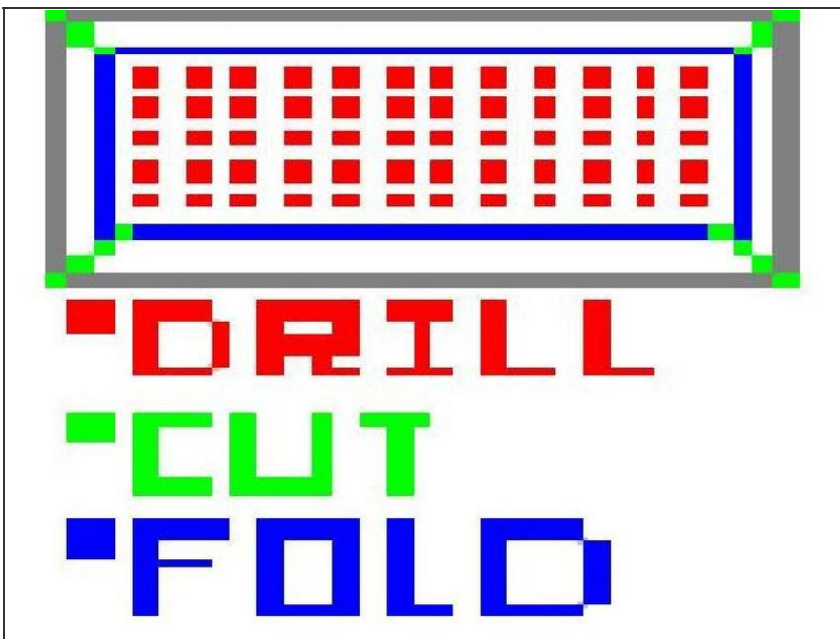


- Mark the Drill, Cut, and Fold marks.
- This image is an outline, if needed.

Step 4

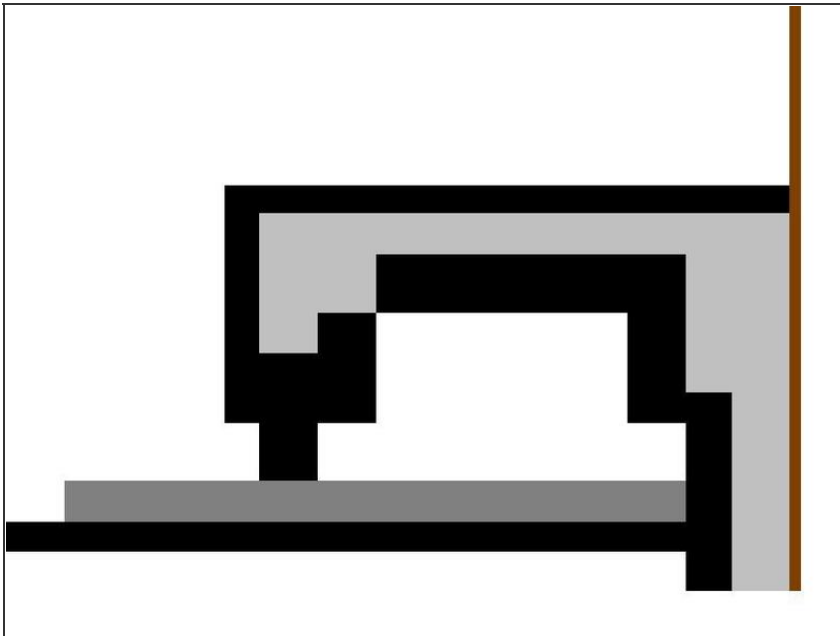

- Drill the holes.
- Cut the corners.
- Fold the Edges.

Step 5

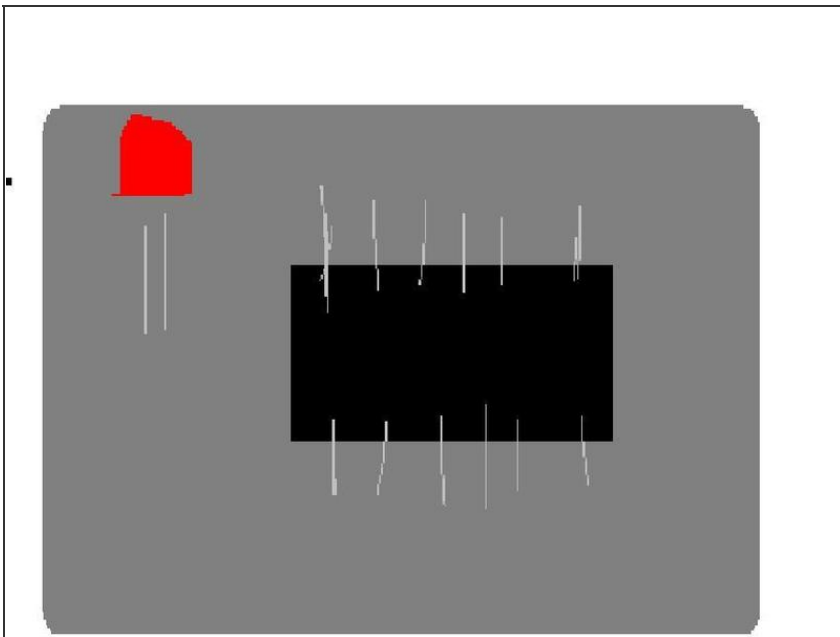

- FINISHED!!
- Use your components on this homemade breadboard.

This document was last generated on 2012-11-03 02:15:07 AM.